

LaboDoser-10

Instruction Manual

Original Instructions



Doc. no.: 16377026-02_B_en

Date of release: 2024.02.29

Copyright

The contents of this manual are the property of Struers ApS. Reproduction of any part of this manual without the written permission of Struers ApS is not allowed.

All rights reserved. © Struers ApS.

Table of Contents

1	About this manual	4
2	Get started	4
2.1	Device description	4
2.2	Check the packing list	5
2.3	Unpack the machine	5
3	Installation	6
4	Operating LaboDoser-10	7
5	Changing lubricant/suspension	8
6	Maintenance	8
7	Manufacturer	8

1 About this manual



CAUTION

Struers equipment must only be used in connection with and as described in the Instruction Manual supplied with the equipment.



Note

Read the Instruction Manual carefully before use.




Note

If you want to view specific information in detail, see the online version of this manual.

2 Get started


2.1 Device description

LaboDoser-10 mounted on LaboPol

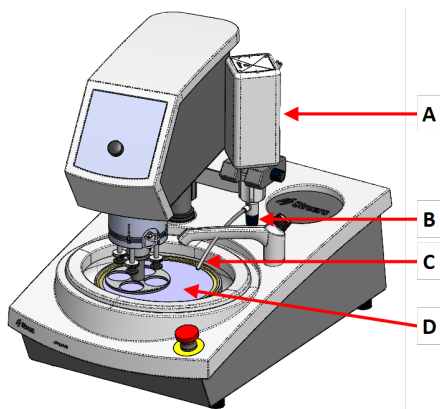

- A LaboDoser-10 suspension/lubricant bottle
- B Adjustable valve
- C Dosing nozzle
- D Preparation disc

LaboDoser-10 mounted on a LaboDoser-10 table stand

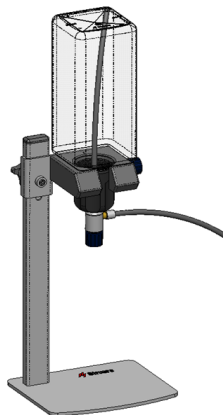

2.2 Check the packing list

The packing box contains the following items:

Pcs.	Description
1	LaboDoser-10 unit with 1.0 liter bottle
1	Suction tube for 0.5 liter bottle
1	Tool for removing Easy connector insert
1	Allen key 3 mm
1	Bracket for doser arm
2	Hexagonal socket screws
1	Instruction Manual set

2.3 Unpack the machine



Note

We recommend that you keep all original packaging and fittings for future use.

1. Cut the packing tape on the top of the box.
2. Remove the loose parts.
3. Remove the unit from the box.

3 Installation




Hint

If lubricant or suspension is not to be used for a prolonged period of time, remove the bottle from the bottle holder and store it upright.

LaboDoser-10 can be mounted on the column of the following units:


- LaboUI
- LaboForce-50
- LaboForce-Mi

Procedure

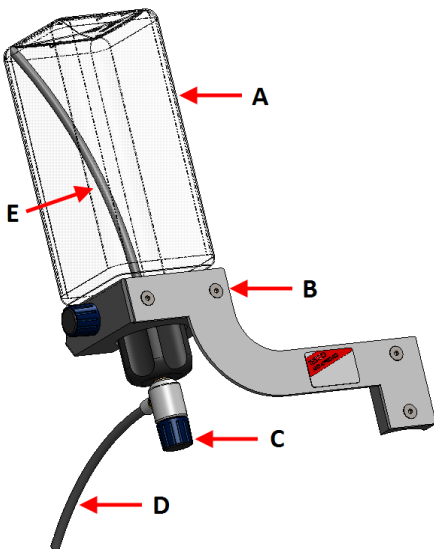

-
- | | |
|--------------------------------------|------------------------|
| A Suspension/lubricant bottle | D Dosing nozzle |
| B Doser arm | E Suction tube |
| C Adjustable valve | |
-

1. Use the bracket and the two screws to mount the dosing arm on the column of the machine.
2. If a new bottle with suspension or lubricant is used, remove the lid and use the tool to remove the Easy connector insert on the bottle.

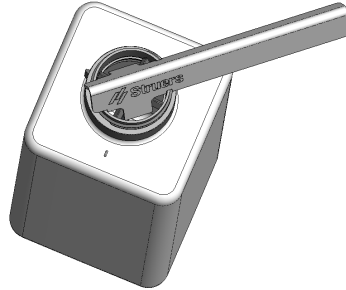

3. LaboDoser-10 cap is mounted with a suction tube (A) for a 1.0 liter bottle. If a 0.5 liter bottle is used, change to the short tube (B).



Note

Make sure to mount the tube with the angled end facing downwards.

4. Attach the bottle cap with adjustable valve onto a Struers suspension/lubricant bottle.
5. Insert the bottle into the doser arm.

4 Operating LaboDoser-10

The operator adjusts a valve to deliver the required amount of suspension or lubricant on the preparation disc.

1. Place the dosing nozzle in the optimal position over the preparation disc.
2. Open the valve and adjust the suspension/lubricant dosing level.
3. When the preparation step has been completed, close the valve to stop dosing.

5 Changing lubricant/suspension

Struers recommends using a separate bottle cap for each consumable.

To use the bottle cap with another consumable:

1. Remove the bottle.
2. Hold the bottle firmly and remove the bottle cap.
3. Empty the bottle and fill it with a mild soap solution.
4. Open the valve and clean the dosing nozzle.
5. Exchange the soap water with clean water and repeat the above procedure.
6. Put the bottle cap on a Struers lubricant/suspension bottle.

6 Maintenance

If LaboDoser-10 has not been used for a longer period, we recommend cleaning it before use and remove any dried suspension/lubricant.

7 Manufacturer

Struers ApS
Pederstrupvej 84
DK-2750 Ballerup, Denmark
Telephone: +45 44 600 800
Fax: +45 44 600 801
www.struers.com

Responsibility of the manufacturer

The following restrictions should be observed, as violation of the restrictions may cause cancellation of Struers legal obligations.

The manufacturer assumes no responsibility for errors in the text and/or illustrations in this manual. The information in this manual is subject to change without notice. The manual may mention accessories or parts not included in the supplied version of the equipment.

The manufacturer is to be considered responsible for effects on safety, reliability, and performance of the equipment only if the equipment is used, serviced, and maintained in accordance with the instructions for use.

en For translations see
bg За преводи вижте
cs Překlady viz
da Se oversættelser på
de Übersetzungen finden Sie unter
el Για μεταφράσεις, ανατρέξτε στη διεύθυνση
es Para ver las traducciones consulte
et Tõlked leiata aadressilt
fi Katso käännökset osoitteesta
fr Pour les traductions, voir
hr Za prijevode idite na
hu A fordítások itt érhetők el
it Per le traduzioni consultare
ja 翻訳については、
lt Vertimai patalpinti
lv Tulkojumus skatīt
nl Voor vertalingen zie
no For oversettelser se
pl Aby znaleźć tłumaczenia, sprawdź
pt Consulte as traduções disponíveis em
ro Pentru traduceri, consultați
se För översättningar besök
sk Preklady sú dostupné na stránke
sl Za prevode si oglejte
tr Çeviriler için bkz
zh 翻译见

www.struers.com/Library